Ai-charging APP

Manual

Solplanet

Ai-charging

Solplanet

Copyright © AISWEI Technology Co., Ltd. 2021. All rights reserved.
No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of AISWEI Technology Co., Ltd.

Trademarks and Permissions

Solplanet and other AISWEI trademarks are trademarks of AISWEI Technology Co., Ltd.
All other trademarks and trade names mentioned in this document are the property of their respective holders.

Notice

The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied.
All other trademarks contained in this document are the property of their respective owners and thir use herein does not imply sponsorship or endorsement of thir products or services. The unauthorzed use of any trademark displayed in this document or on the product is strictly prohibited.

TABLE OF CONTENTS

01 About This Document 3
1.1 Overview 3
1.2 Intended Audience 3

02 Download “Ai-charging” App 3

03 Register for a new account 3
3.1 Register via mobile 3
3.2 Register via e-mail 4

04 Connect to EV charger 6
4.1 Add EV charger 6
4.2 Wi-Fi configuration 7

05 Home screen 9

06 My EV Charger Screen 9

07 Scheduled charging 10
7.1 Single charge 10
7.2 Cyclic charge 11
7.3 Off-peak mode 12
7.4 Scheduled charging for UK region 13

08 Scheduled charging 14
8.1 Max. allowable charging current configuration 14
8.2 Energy Meter 15

09 Dynamic Load Balancing 16

10 Solar Energy Mode 17

11 RFID card management 18

12 Work mode setting 19

13 Firmware update 20

14 Randomised delay charging 21

15 Network configuration 22

16 Sharing management 27

17 Contact us 28

1. About This Document

1.1 Overview

This document describes the common operations of the Ai-charging app.

1.2 Intended Audience

This document is intended for:

- Installers
- Users

2. Download “Ai-charging” App

You can scan the QR code, download the Ai-charging APP application.

Available for device with Android version later than 8.0, and iOS mobile device, .version 12.1 or later.

3. Register for a new account

Please register an account if you do not have an existing Solplanet account.

3.1 Register via mobile

Step 1: Open Ai-charging APP.

Step 2: Tap“Register”.

Step 3: Tap “Via mobile phone”.

*Select country code, enter the mobile phone number.

*Please read and confirm the “privacy policy” and the “terms of service”. If you accept them, please tick the checkbox and tap “Send verification code” button.

Step 4: Enter the SMS verification code you received.

Step 5: Enter your login password twice.

*The password must contains 8-32 characters, containing at least one letter and one numeral.

*Tap “Register” button.

Step 6: Tap “Continue” button to finish registeration.

For details, Please refer to Figure 1.

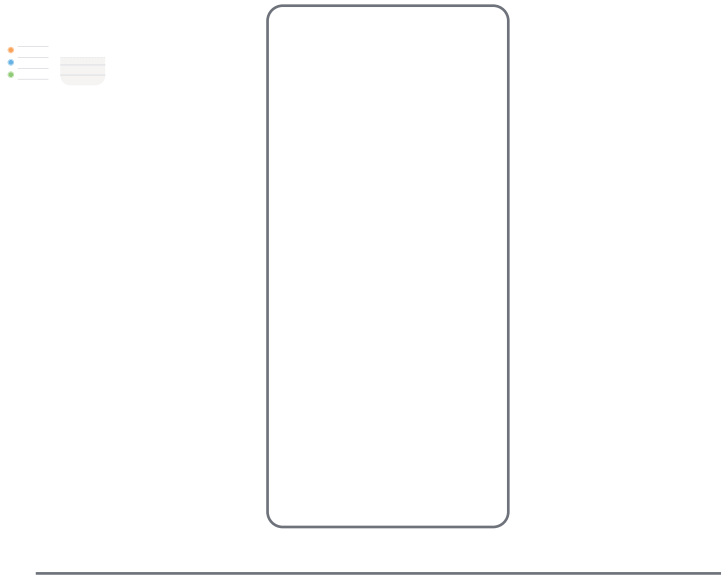

3.2 Register via e-mail

Step 1: Tap “Via e-mail” button.

*Please select the country and enter your e-mail address.

*Please read and confirm the “privacy policy” and the “terms of service”. If you accept them, please tick the checkbox and tap “Send verification code” button.

7. Scheduled charging

7.1 Single charge

Step 1: Tap the scheduled charging icon.

Step 2: Tap single charge and define start time and end time for charging.

Step 3: Tap “OK” and the electric vehicle will be charged as per the schedule.

For details, Please refer to Figure 7.

Figure 7. Single charge

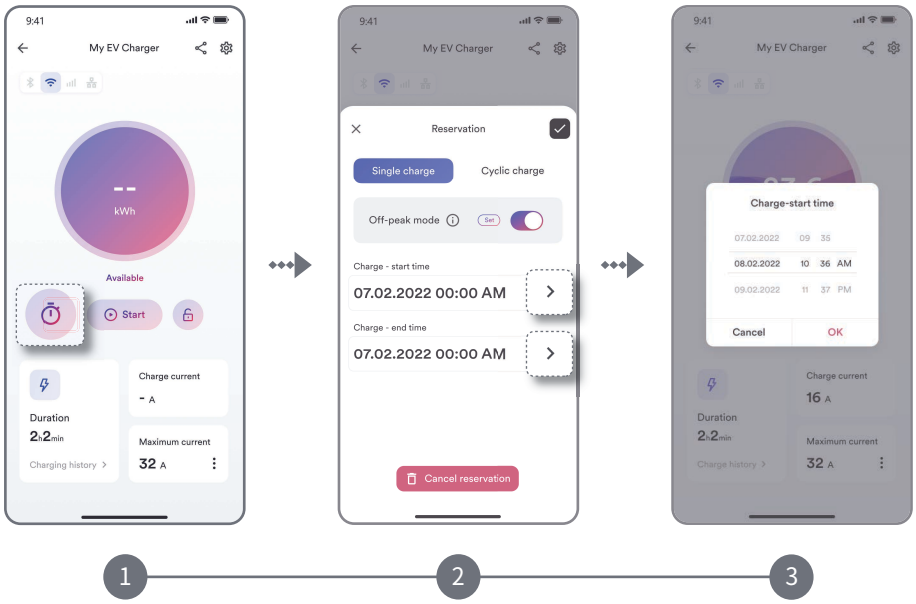

7.2 Cyclic charge

Step 1: Tap the scheduled charging icon.

Step 2: Select single charge, define start time and end time for charging and set weekly schedule.

Step 3: Tap “OK” and the electric vehicle will be charged as per the schedule.

For details, Please refer to Figure 8.

Figure 8. Cyclic charge

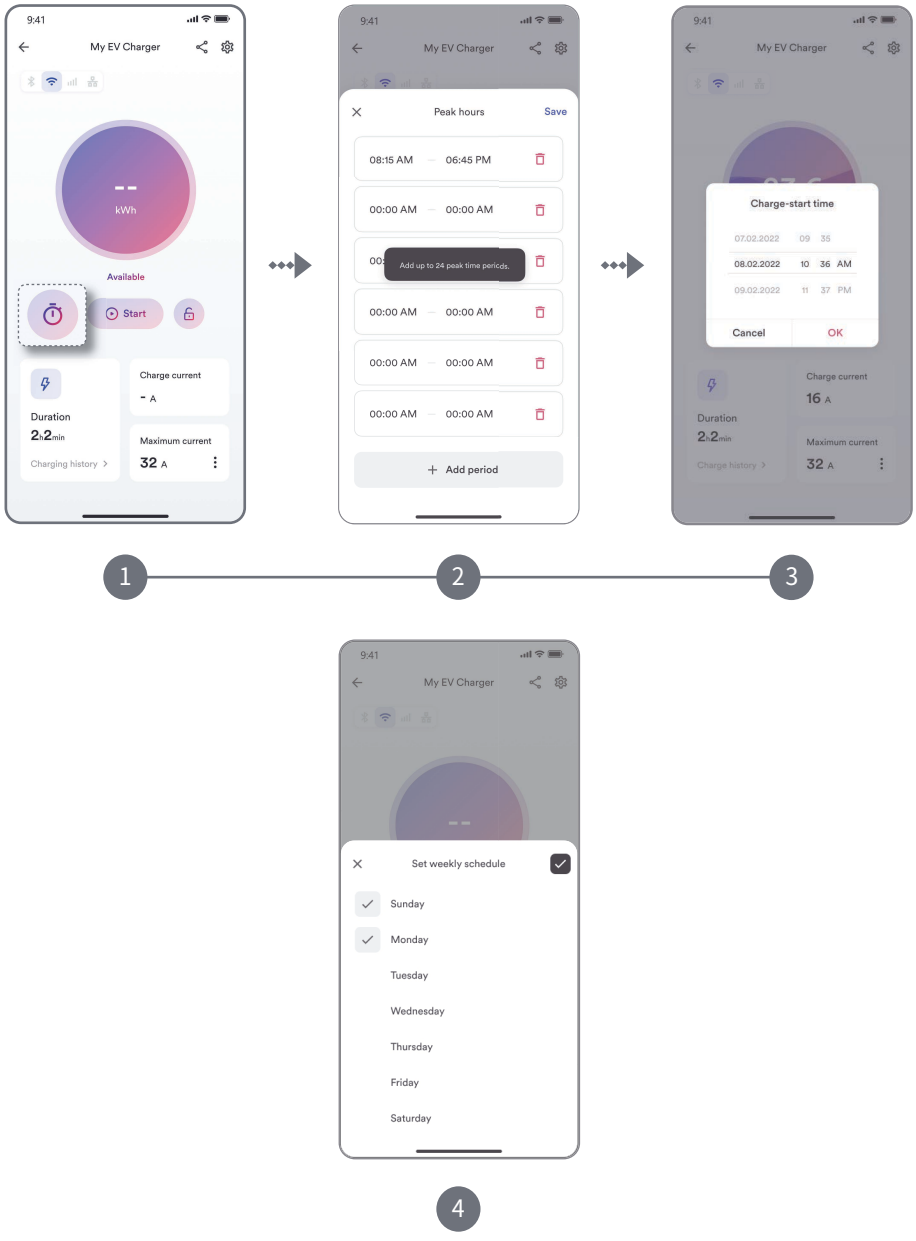

7.3 Off-peak mode

If you turn on the Off-peak mode and specify peak hours, the start and end time will override the pre-set peak hours, charging will automatically pause during peak hours but resume during Off-peak hours.

Step 1: Enable Off-peak mode.
Step 2: Tap "Set" to add peak hour period.
Step 3: Tap "+ Add" to define peak hours start time and end time.
Step 4: Tap "OK", the EV charger will not operate during peak hours.

For details, Please refer to Figure 9.

Figure 9. Off-peak mode

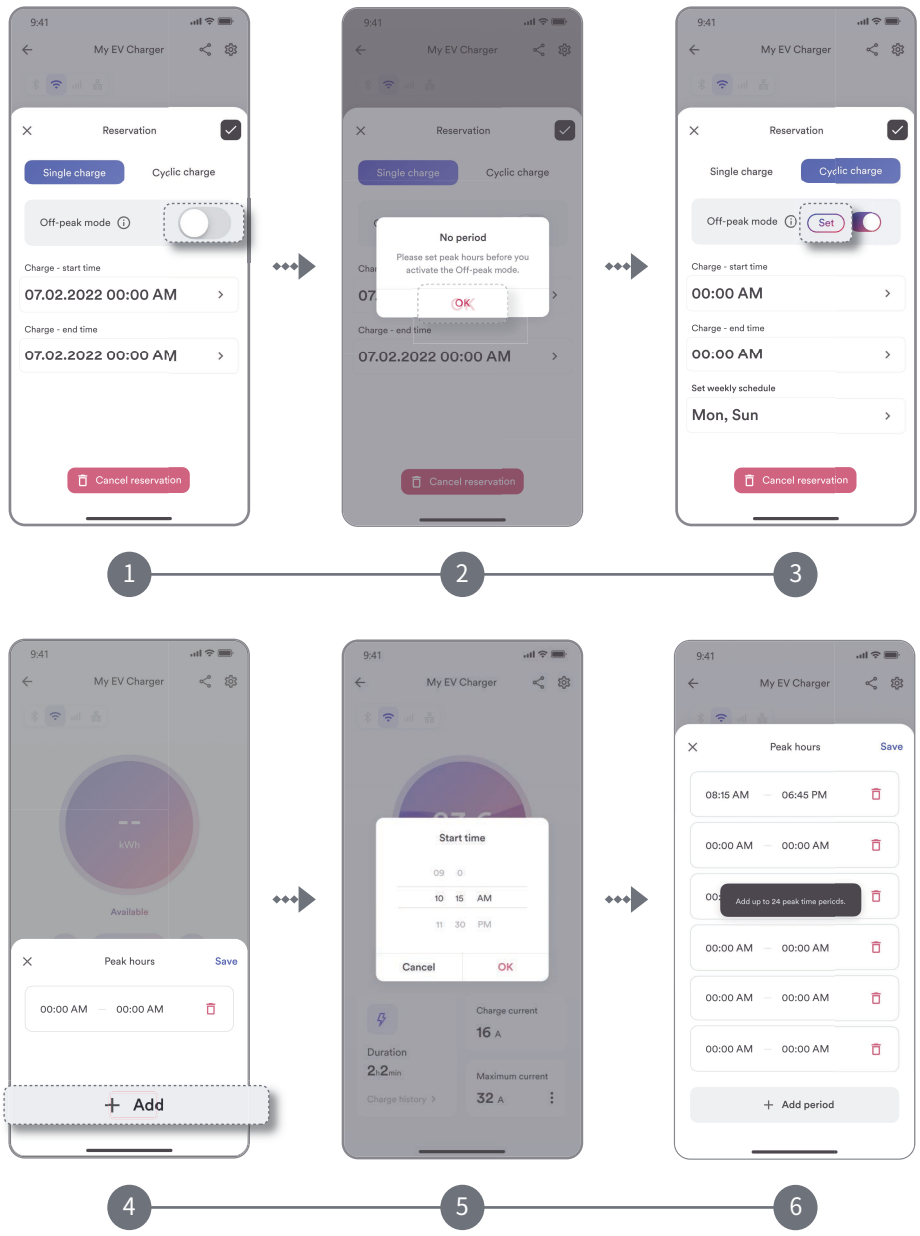

7.4 Scheduled charging for UK region

As per UK' s regulation, your EV charger has been pre-set the default charging hours which are outside of peak hours. You can manually turn off Off-peak mode or change the default charging hours after first installation.

*The given peak hours of charging are 8am-11am and 4pm-10pm. Off-peak switch is enabled by default.

For details, Please refer to Figure 10.

Figure 10. Scheduled charging for UK region

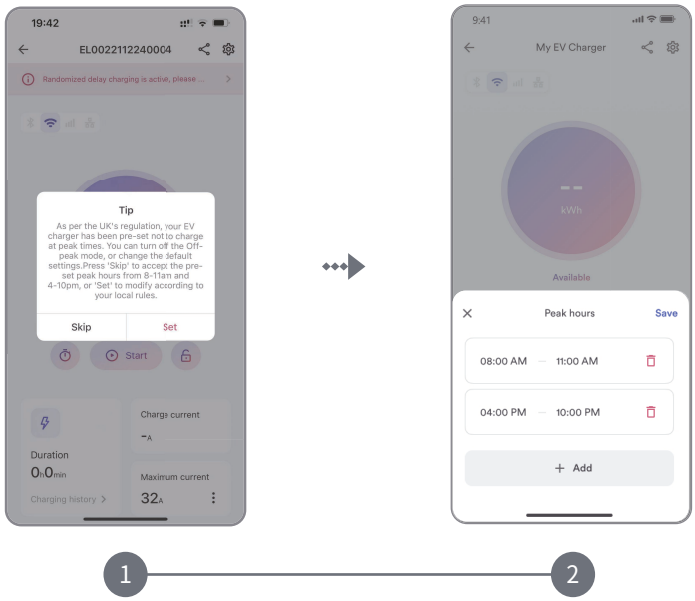

8. Scheduled charging

8.1 Max. allowable charging current configuration

Step 1: Tap Setting icon.

Step 2: Tap “EV charger information”.

Step 3: Tap Max. allowable charging current and set the maximum allowable charge current used to charge the electric vehicle.

For details, Please refer to Figure 11.

Figure 11. Max. allowable charging current configuration

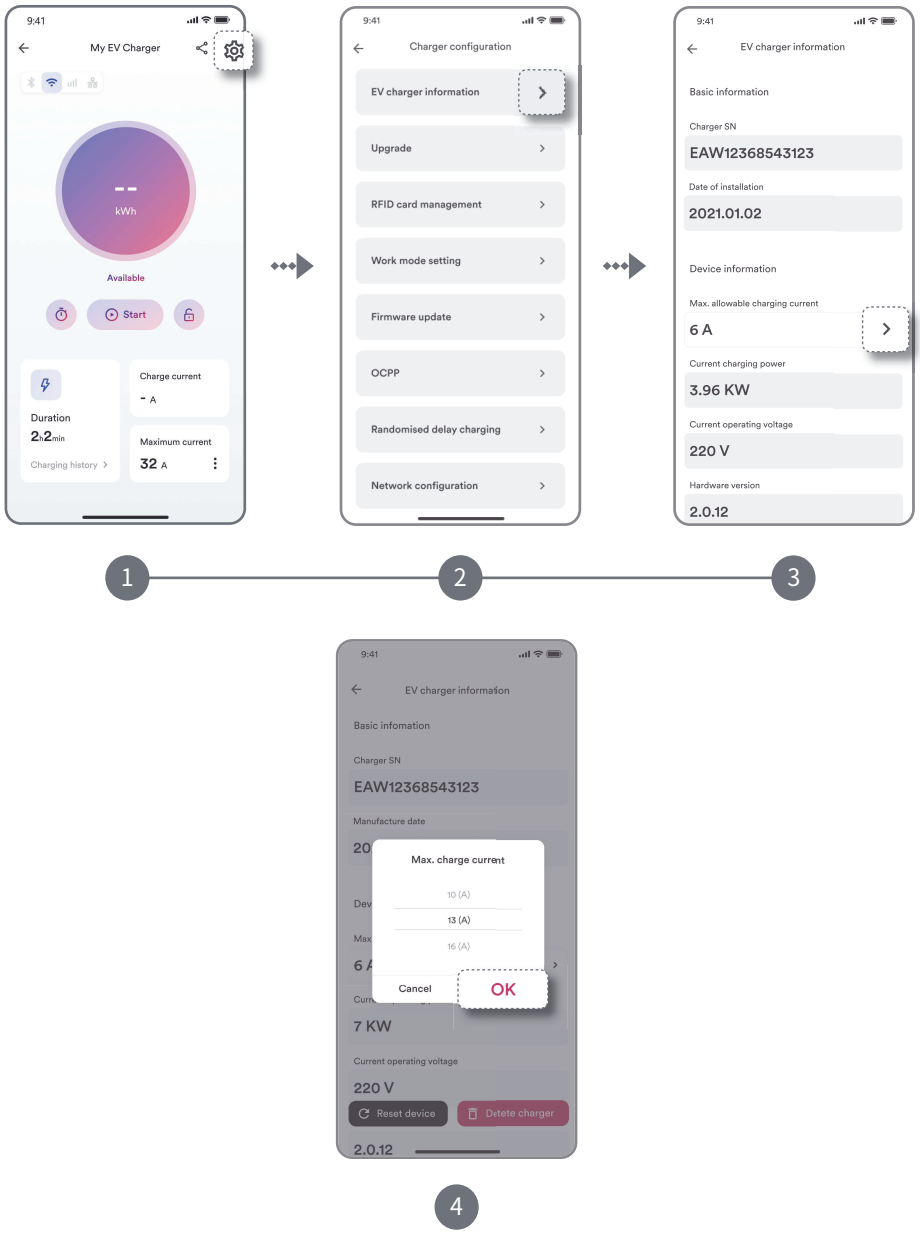

8.2 Energy Meter

8.2.1 Manually to add meter

Step 1: Tap “Setting” icon.

Step 2: Select “EV charger information”.

Step 3: Tap “Energy meter”.

Step 4: Enter the serial number, select smart meter model, the message shows “Configuration successful!”, the energy meter is added successfully.

For details, Please refer to Figure 12.

Figure 12. Manually to add meter

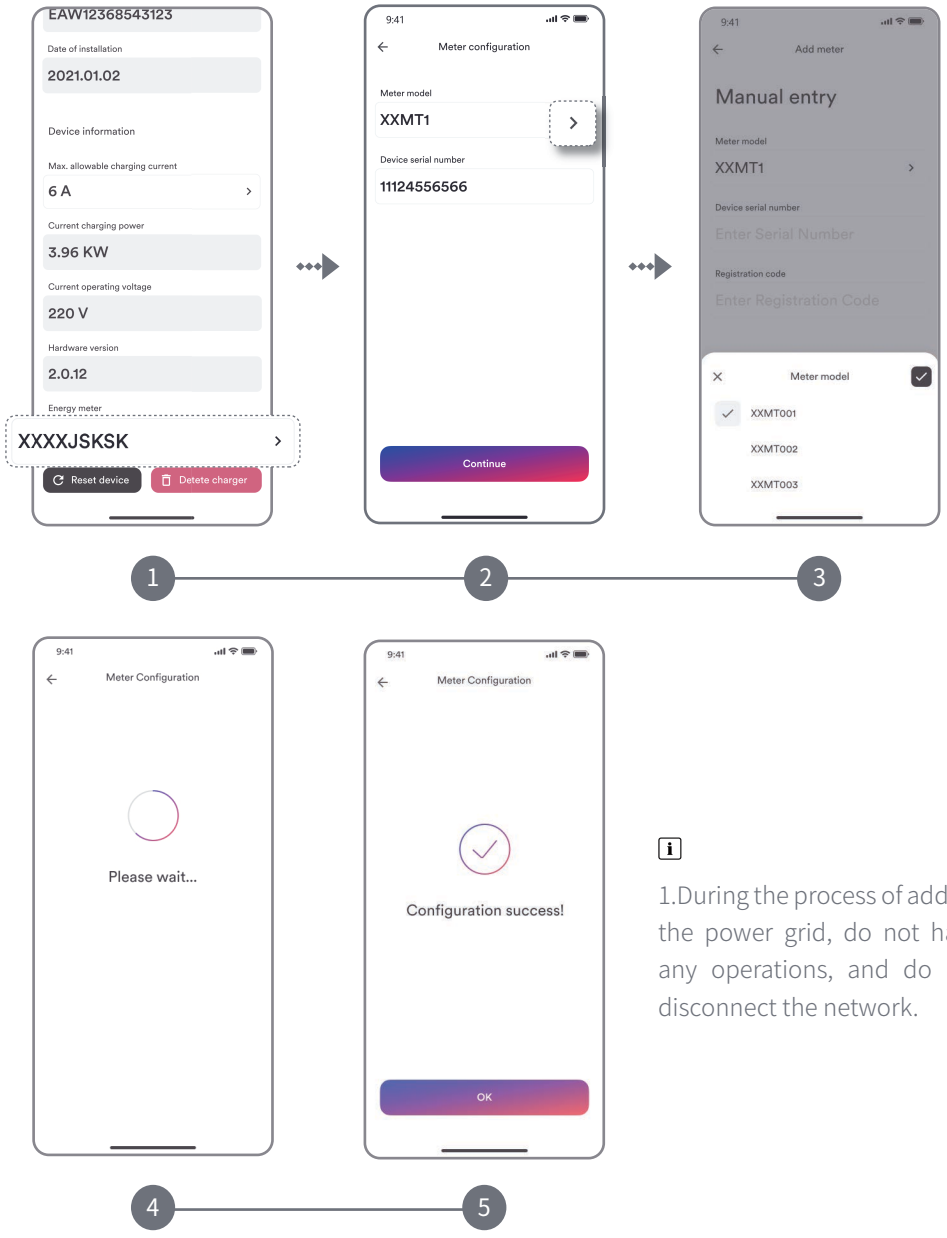

1.During the process of adding the power grid, do not have any operations, and do not disconnect the network.

9. Dynamic Load Balancing

The dynamic load balancing offers further protection to ensure that your charging does not overload your domestic electrical system, it is useful for those with a limited grid supply that may trip under high loads.

In order to enable dynamic load balancing function for your EV charger, you will need to install a compatible energy meter.

Step 1: Tap “Upgrade”.

Step 2: Tap“Dynamic Load Balancing”.

Step 3: Enter the “Maximum system current” and Tap ”Save”.

If the energy meter is not added or is not a compatible energy meter, the message will show: The specified meter is not installed. This function cannot be used. Tap “Install” to bind the meter.

For details, Please refer to Figure 13.

Figure 13 . Dynamic Load Balancing

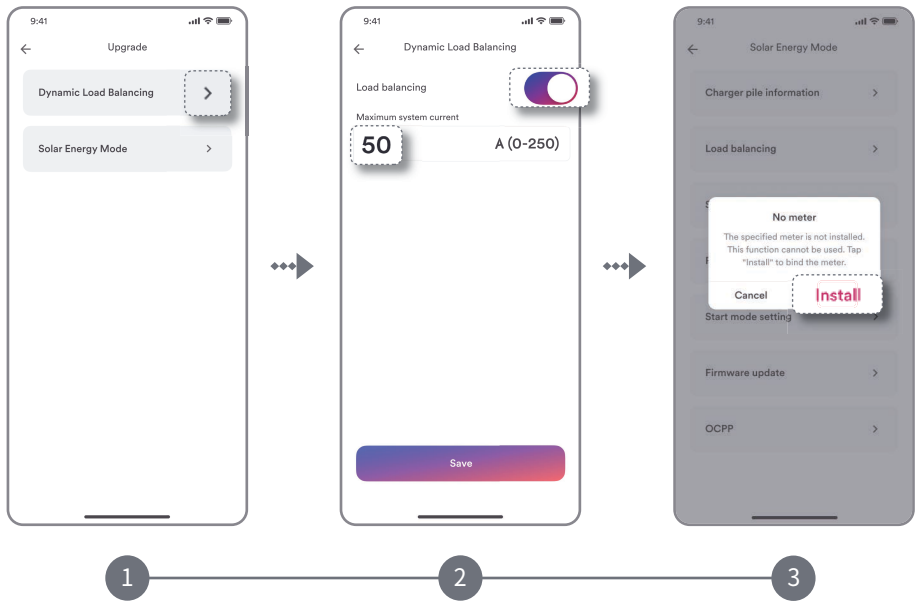

10. Solar Energy Mode

Solar Energy mode allows you to use the photovoltaic generated energy to charge your electric vehicle in a sustainable and eco friendly way. It offers two different charging modes: Eco mode and Solar PV mode.

Eco mode: Unused surplus green energy will be detected and combined with grid power to charge vehicle.

Solar PV mode: Uses 100% solar energy to charge vehicle.

In order to enable solar energy mode for your EV charger, a compatible energy meter is required.

Step 1: Tap“Solar Energy Mode”.

Step 2: Enable “Solar Energy Mode”.

Step 3. Tap“Eco mode” or “Solar PV mode” and tap “Save”.

For details, Please refer to Figure 14.

Figure 14. Dynamic Load Balancing

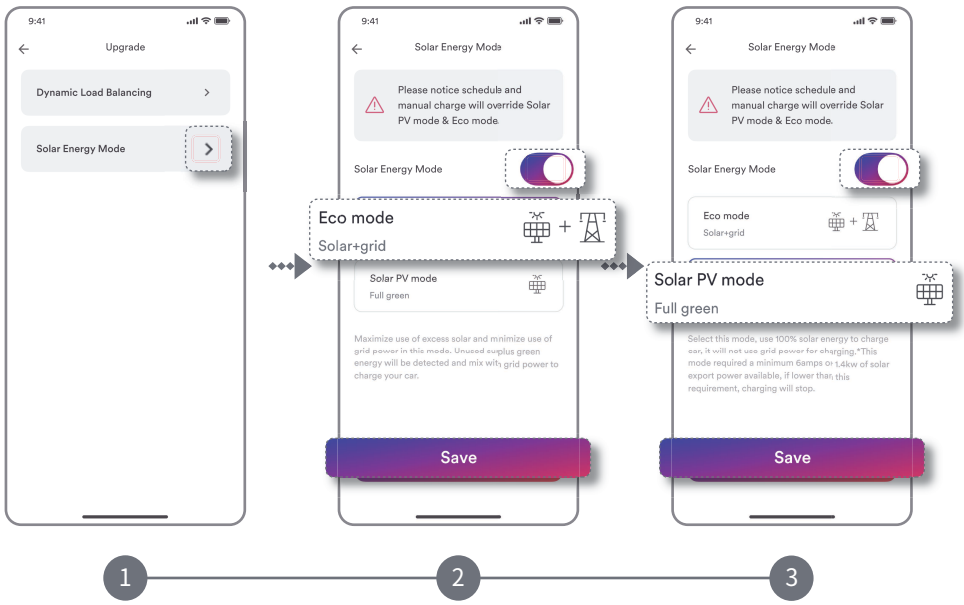

Please note that schedule and manual charge will override Solar PV mode & Eco mode if Solar Energy Mode is enabled.

Please set the solar inverter mode to “export” to the grid when there is surplus of green energy within the home power system.

Please note that the solar energy mode may discharge your battery storage system.

11. RFID card management

To add a RFID card simply swipe the card in front of the RFID area on the EV charger and it will automatically add itself to the RFID card management screen.

Step 1: Tap “RFID card management” and you will see authorized cards.

Step 2: To delete RFID cards from the RFID management screen simply tap unbind icon and confirm the remove of the card.

For details, Please refer to Figure 15.

Figure 15. RFID card management

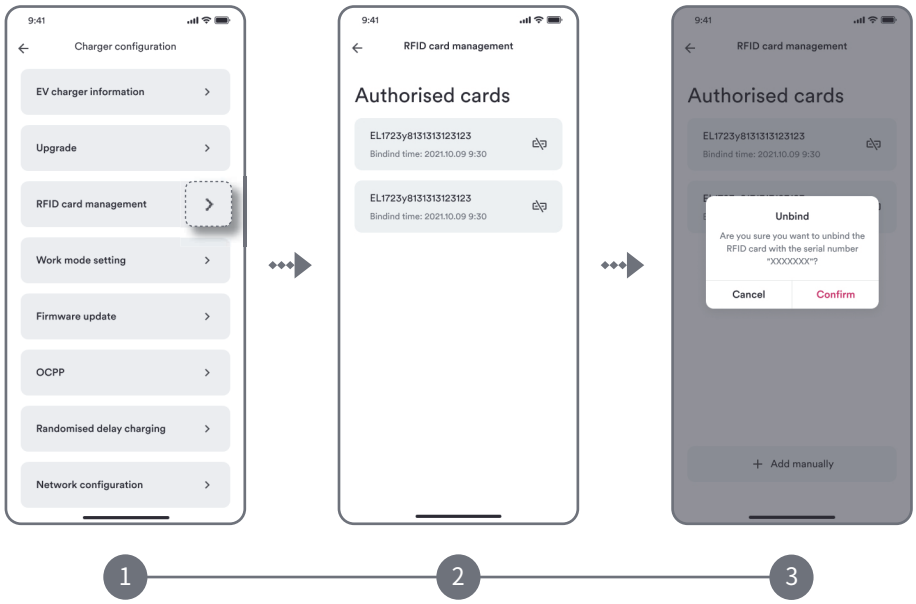

ⓘ Do not connect your charging plug to your EV when your RFID card is activating.

12. Work mode setting

Step 1: Tap “Work mode setting”.

Step 2: Enable “Plug and play” mode.

Plug and play mode: This mode allows users to charge an EV simply by connecting the charger to the EV without the need of the App or a registered RFID card.

For details, Please refer to Figure 16.

Figure 16. Work mode setting

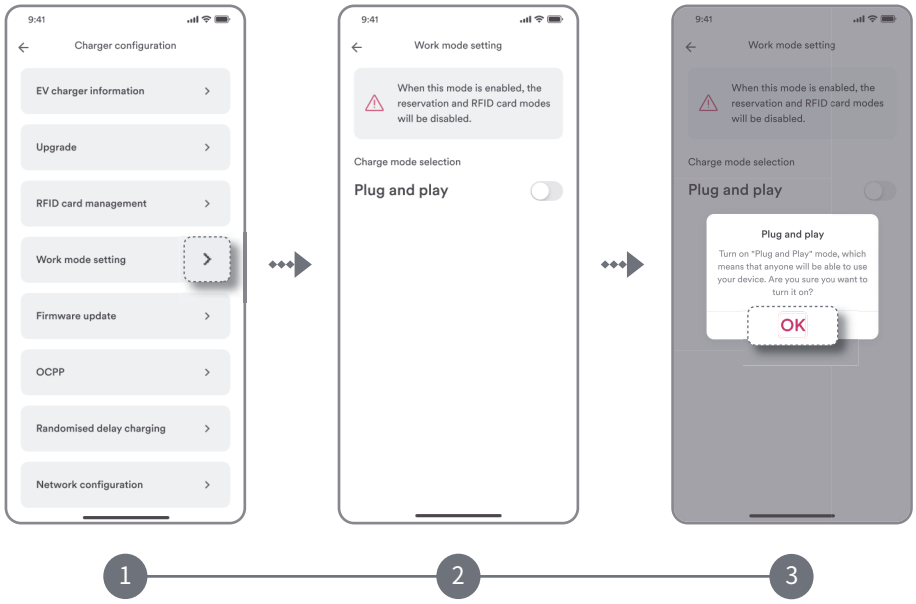

ⓘ Please note that after the Plug and play mode is turned on, the scheduled charging and RFID card modes will not be enabled.

13. Firmware update

Tap Firmware update to display the current version number, tap “Upgrade”, as shown in the figure.

For details, Please refer to Figure 17.

Figure 17. Firmware update

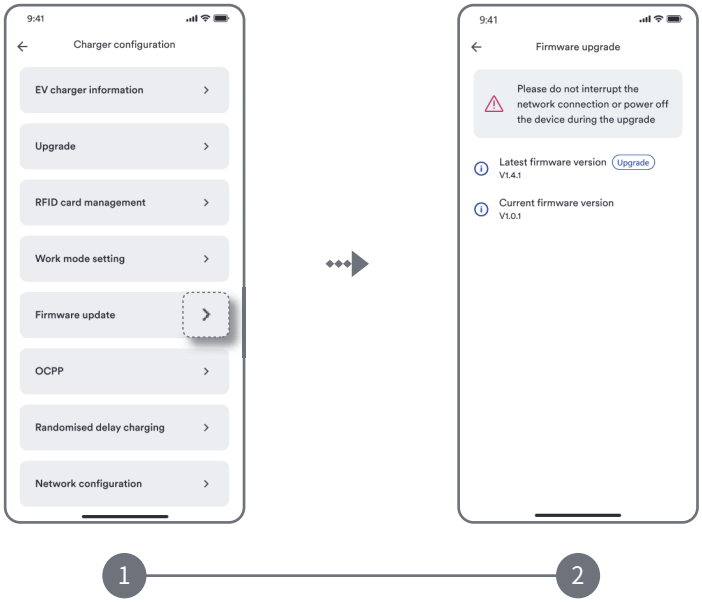

Note: Please do not interrupt the network connection or power off the EV charger during the upgrade process.

14. Randomised delay charging

Step 1: Tap “Randomised delay charging”.

Step 2: Enable “Randomized delay charging”.

Step 3: Enter delay time.

Step 4: Tap “Save” and will active this mode.

If you are UK user, after the EV charger is successfully set up, the randomised delay setting will be enabled by default based on UK regulation, user can manually override the setting after the initial set up.

For details, Please refer to Figure 18.

Figure 18. Randomised delay charging

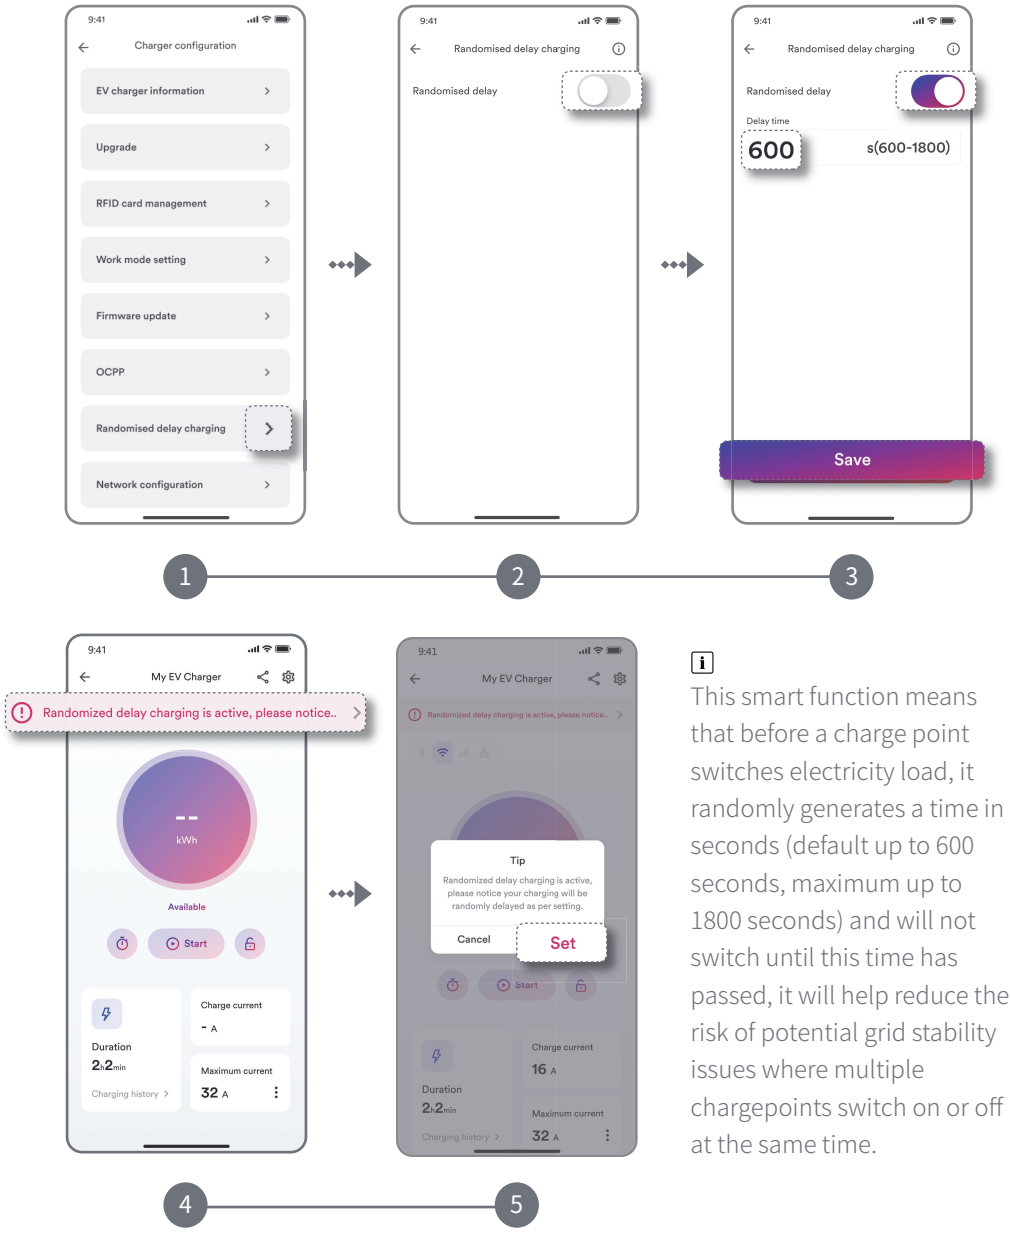

This smart function means that before a charge point switches electricity load, it randomly generates a time in seconds (default up to 600 seconds, maximum up to 1800 seconds) and will not switch until this time has passed, it will help reduce the risk of potential grid stability issues where multiple chargepoints switch on or off at the same time.

15. Network configuration

Step 1: Tap the “Network Configuration” entry.

Step 2: Choose and enable the network type to be used (4G, Wi-Fi, Ethernet), then click the “Save” button to validate the network configuration.

Notice

- Only one network mode switch can be selected here (two or more cannot be turned on at the same time).
- Enter this entry, if you have previously configured Wi-Fi or 4G, the corresponding switch will show on the state.
- After changing the network mode, the EV charger will restart.

For details, Please refer to Figure 19.

Figure 19. Network Configuration

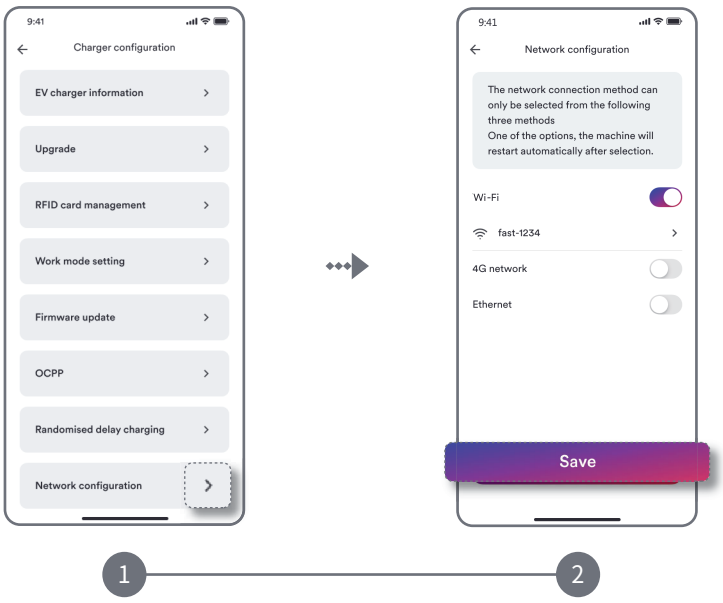

Wi-Fi configuration introduction

Here you can configure the Wi-Fi network or change the current Wi-Fi network.

Step 1: Click on the "Network Configuration" portal.

Step 2: Turn on the 'Wi-Fi' switch.

Step 3: You can configure the Wi-Fi network or change the network by tapping the list below the switch.

Step 4: Select network from the list you want to configure or choose a different Wi-Fi network name.

*If your Wi-Fi network does not appear in the search list, you can manually search to configure it by entering the Wi-Fi name (ssid) and password.

Step 5: Enter the password, then tap "Continue".

Step 6: After completing the above steps, the system will be automatically configured. After feedback on the "Success" screen, click "Continue" to end the process.

Step 7: At this point, return to the higher-level page and click the "Save" button to make the network configuration effective.

For details, Please refer to Figure 20.

Figure 20. Wi-Fi configuration

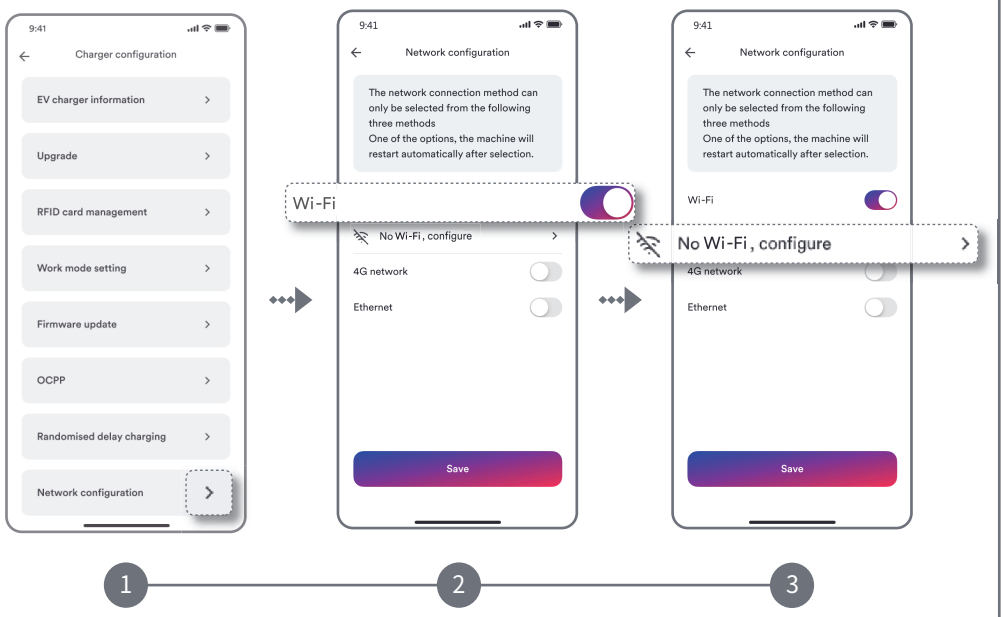

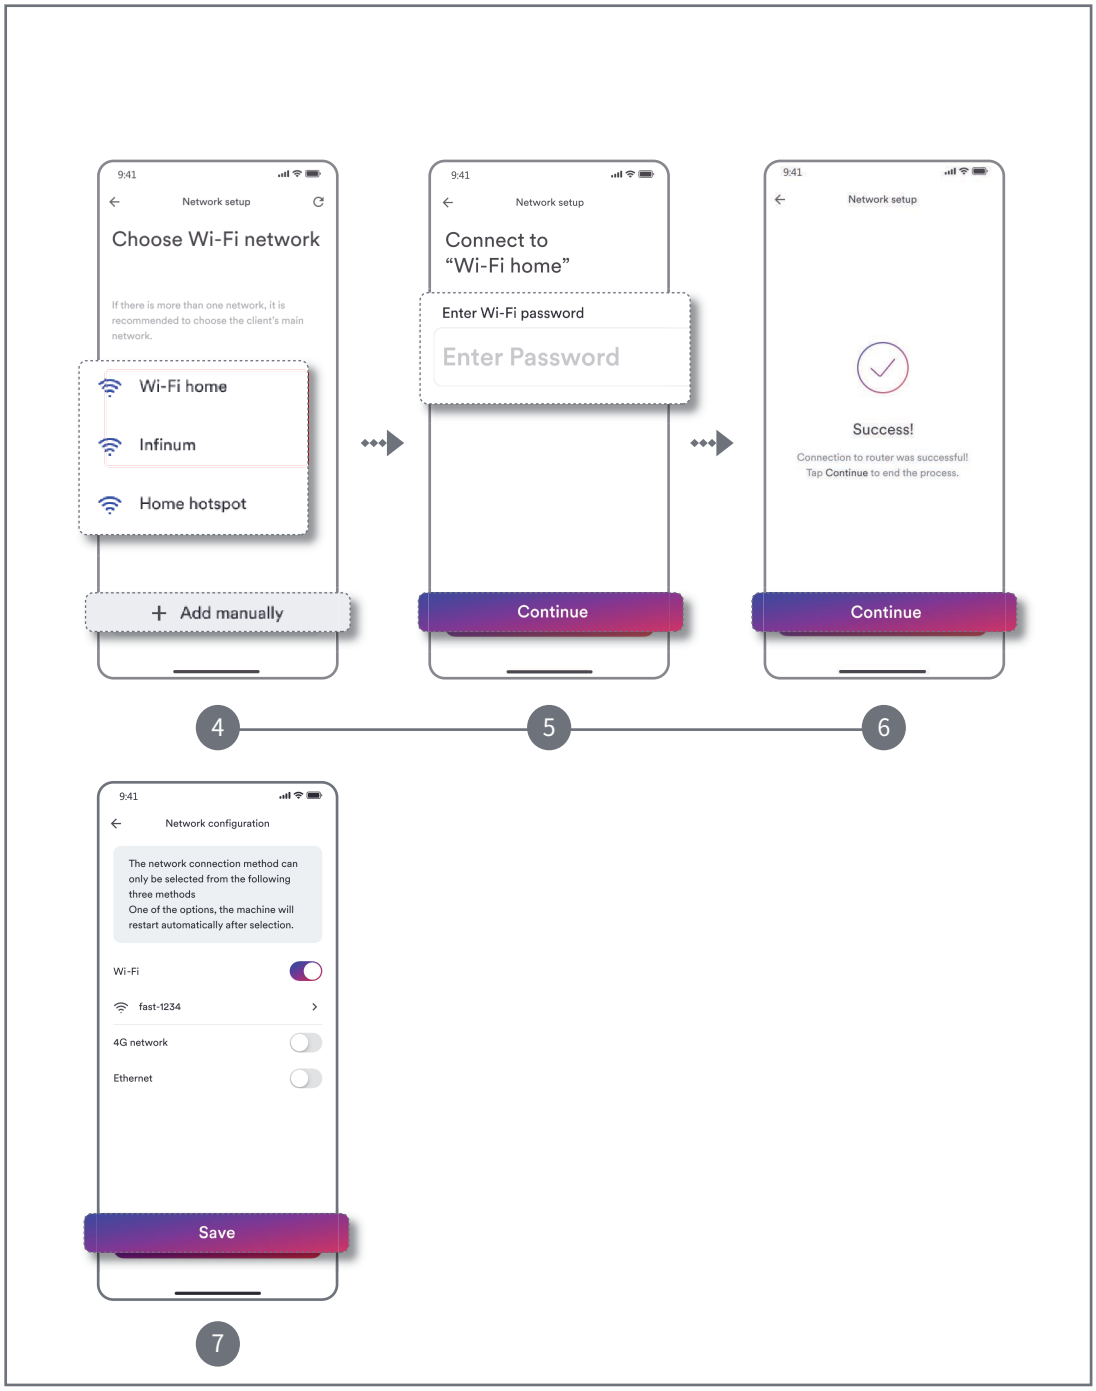
9:41
Network setup
Choose Wi-Fi network
If there is more than one network, it is recommended to choose the client's main network.
Wi-Fi home
Infinum
Home hotspot
+ Add manually
4
9:41
Network setup
Connect to "Wi-Fi home"
Enter Wi-Fi password
Enter Password
Continue
5
9:41
Network setup
Success!
Connection to router was successful!
Tap Continue to end the process.
Continue
6
9:41
Network configuration
The network connection method can only be selected from the following three methods
One of the options, the machine will restart automatically after selection.
Wi-Fi
fast-1234
4G network
Ethernet
Save
7

4G configuration introduction

Please ensure your EV Charger supports 4G function.

Step 1: Enable 4G.

Step 2: You can configure the 4G network or change the network by tapping the list below the switch.

Step 3: Enter the appropriate information (APN address, username and password) and tap "Save".

Step 4: At this point, you will return to the superior page and click the "Save" button to take effect the network configuration.

For details, Please refer to Figure 21.

Figure 21. 4G configuration

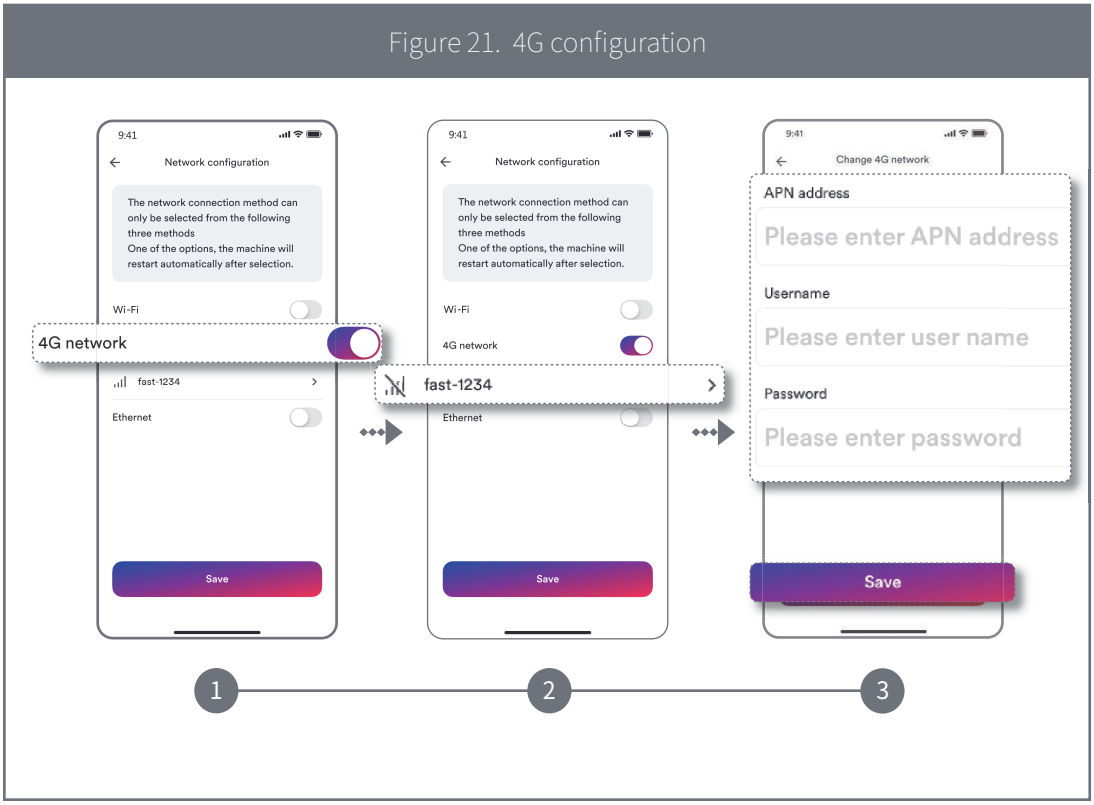

Ethernet configuration introduction

Step 1: Enable Ethernet, then click the "Save" button to validate the network configuration.

Step 2: Connect the network cable to the EV charger and router. The configuration is complete after the EV charger restarts.

For details, Please refer to Figure 22.

Figure 22. Ethernet configuration

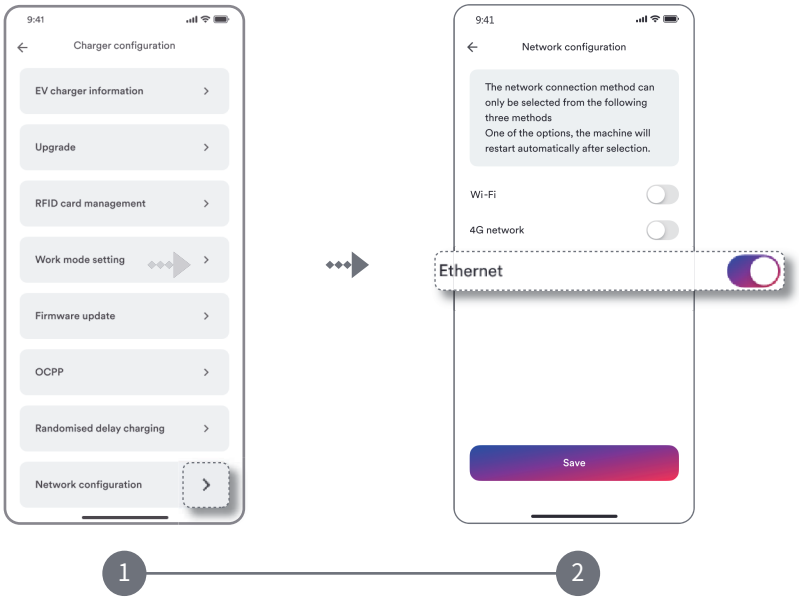

Only one of network option can be selected each time, when switching from one network mode to another, the EV charger will restart automatically.

16. Sharing management

A charger connected to one registered account can be shared with another user with a registered account. The shared user is then able to charge an EV.

Step 1: Tap the share button.

Step 2: Tap "+".

Step 3: Enter the registered account, tap "Confirm", the sharer is added successfully.

Step 4: You can also delete the sharer, tap "Unshare", delete the sharer successfully.

For details, Please refer to Figure 23.

Figure 23. Sharing management

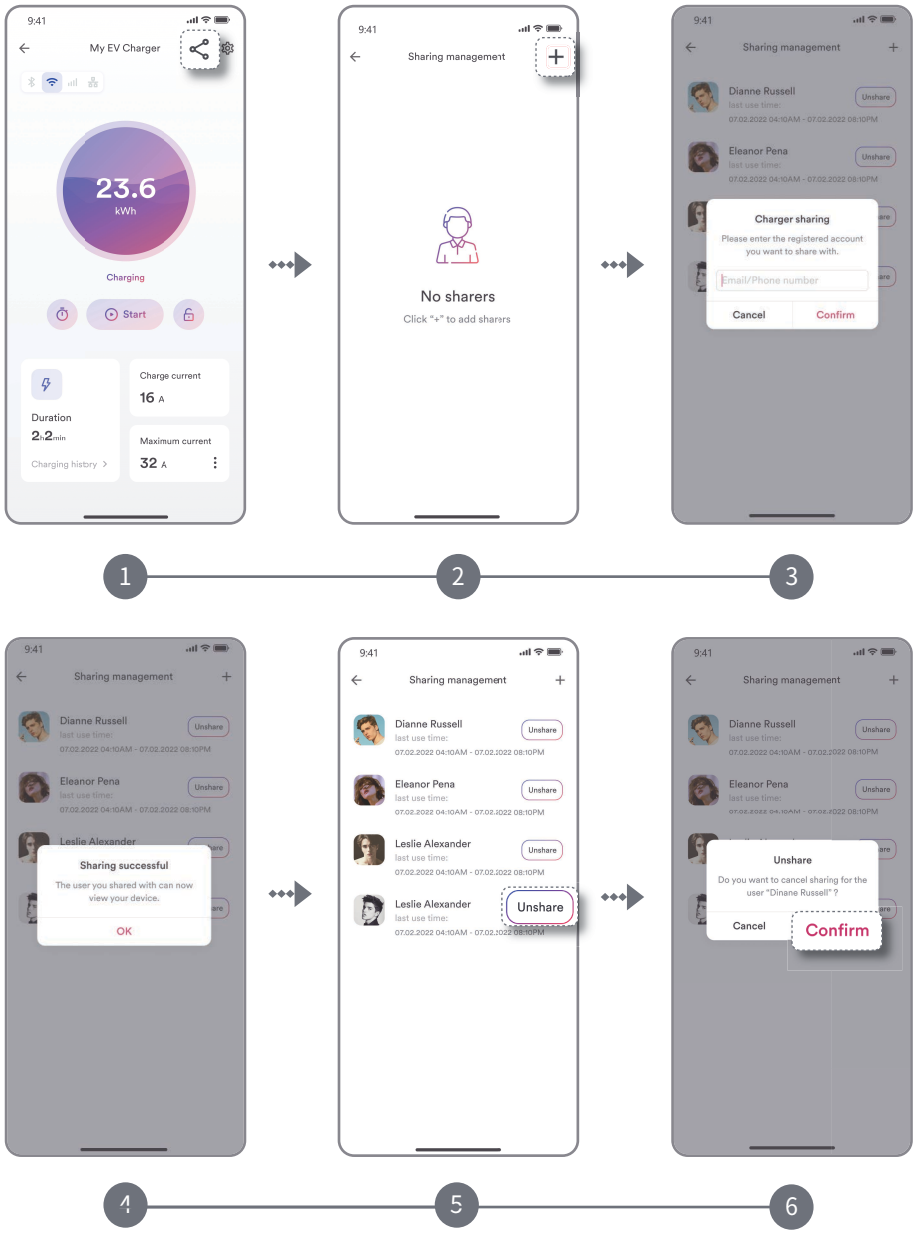

Please notice the shared account does not have functions such as re-sharing, reservation, EV charger parameter setting, etc.

17. Contact us

If you have any technical problems with our products, please contact our service.
Provide the following information when you initiate a service request:

- EV charger device type
- EV charger serial number
- Error code (LED flash code/status)
- Mounting location
- Proof of purchase

Service Contact:
Website: https://solplanet.net/contact-us/
You can submit your claims online by visiting our website:
https://solplanet.net/claims/
You will receive a response within 24 hours.

AISWEI Technology Co., Ltd.
Add.: Room 905B, 757 Mengzi Road, Huangpu District, Shanghai,200023,China
Web: https://solplanet.net

AISWEI Technology Co., Ltd.

Room 905B, 757 Mengzi Road, Huangpu District, Shanghai,200023,China

Web: https://solplanet.net